
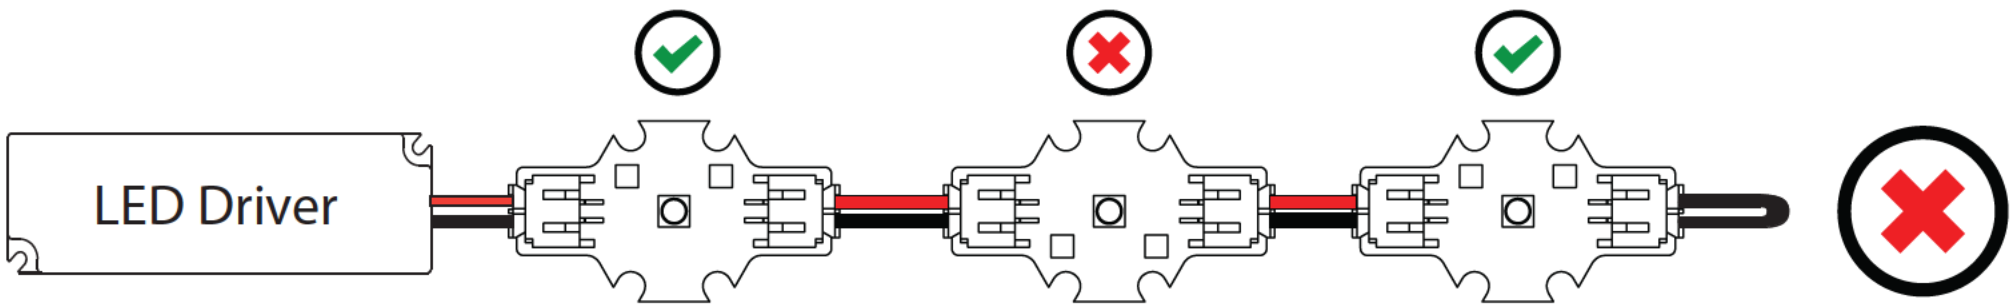


Solderless Wiring Diagram

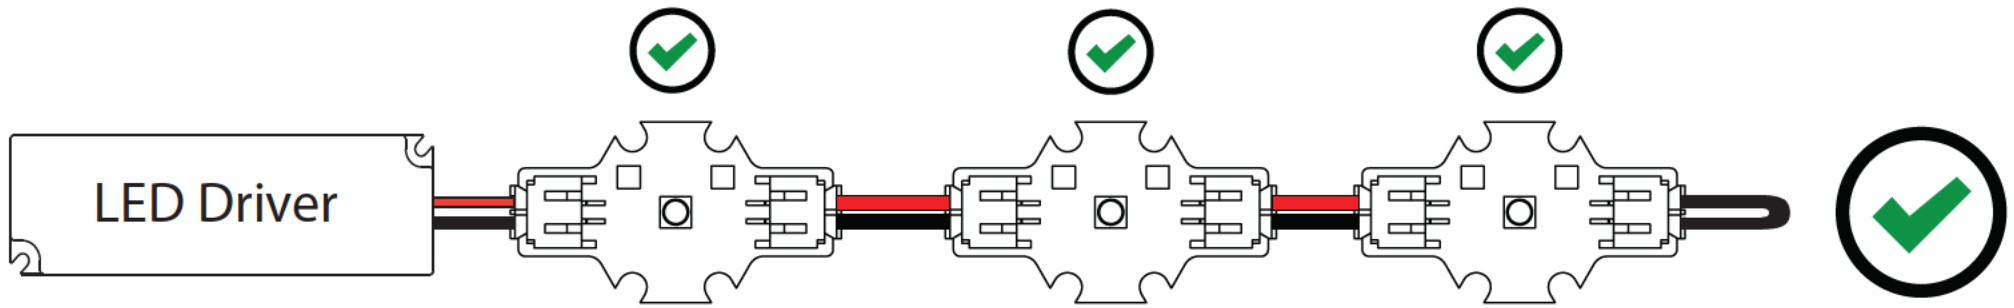

Precautions:

***** Apply no power until ALL wiring is complete *****

- Ensure the minimum number of LEDs are attached to your driver
- Adjust SVR2 (if necessary)
- Do not install LEDs upside down as indicated above